


Standard Paparazzi & Fast Paparazzi

All lights in the zone illuminate in a random pattern to emulate numerous flash bulbs


- When this behavior is selected, all fixtures will turn OFF for an instant before flashing begins. Flashing lights alternate between 0% and 100% for complete light change appearance until another behavior is selected. *Fast Paparazzi flashes faster than Standard Paparazzi.*

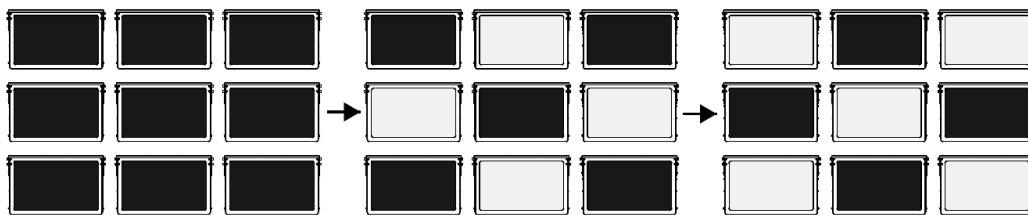

Standard Sparkle & Fast Sparkle

All lights in the zone randomly fade in and out, creating a sparkling effect on the playing surface

- When this behavior is selected, all fixtures will turn ON for an instant before flashing begins. Fading lights alternate between 10% and 100% until another behavior is selected. *Fast Sparkle flashes faster than Standard Sparkle.*

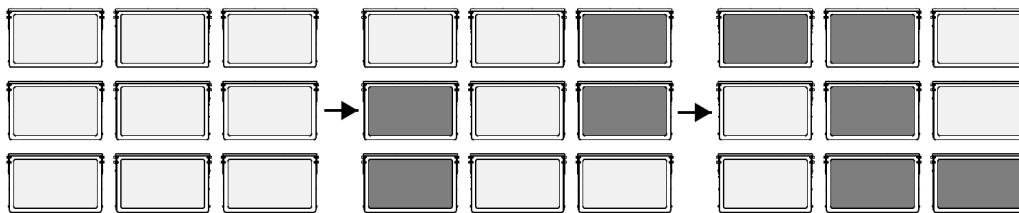

Random

All lights in the zone cycle through random light levels in a random pattern

- When this behavior is selected, all fixtures will turn ON for an instant to random levels before flashing begins. Flashing lights change to random light levels between 0% and 100% illumination until another behavior is selected.

